



1. External Parts

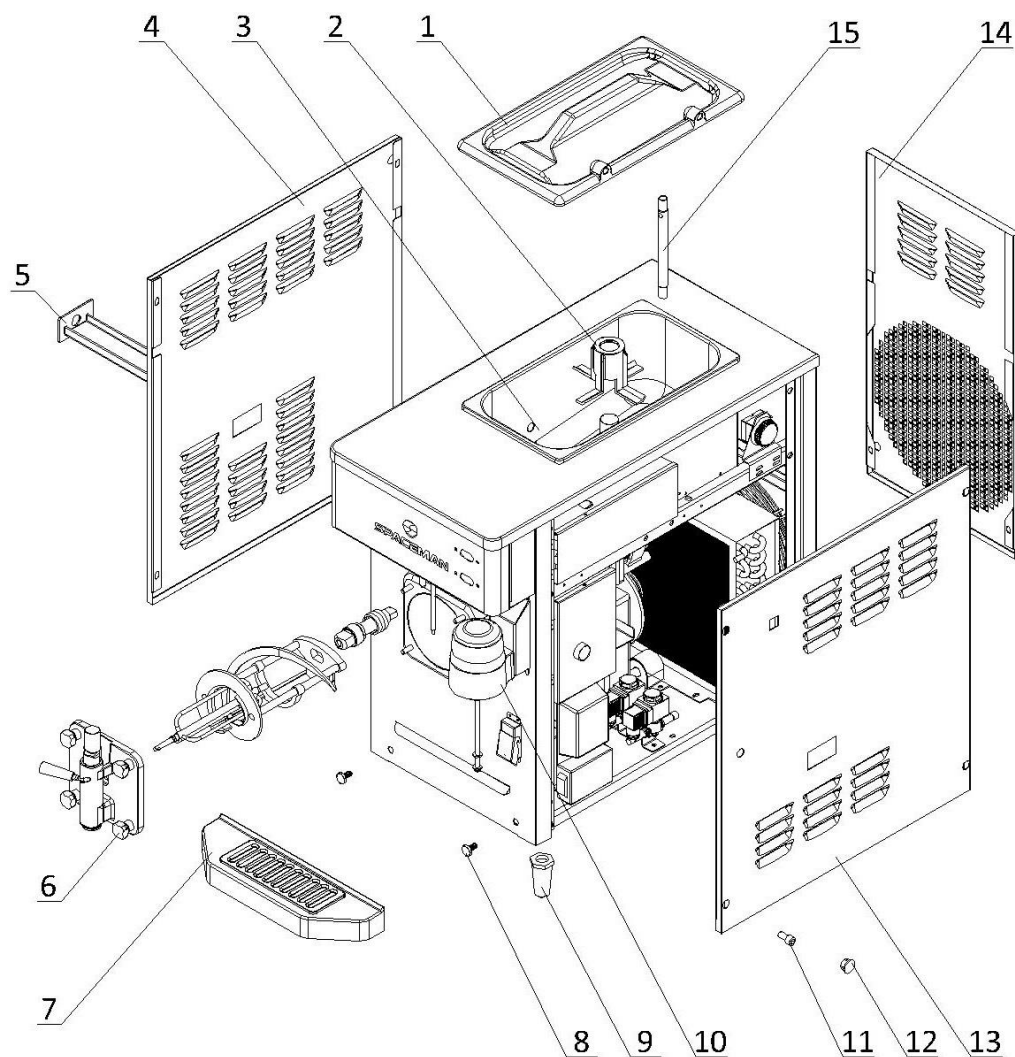

1. External Parts

Item	Part Number	Description	Qty.
1	3.4.03.01.004	Hopper Lid	1
2	Page 7	Hopper Agitator	1
3	3.1.03.04.009	Mix Low Sensor	1
4	2.3.4.28.042	Panel - Left	1
5	3.4.04.02.002	Internal Drip Tray	1
6	Page 5	Dispensing Door and Beater	1
7	3.4.04.01.002	Front Drip Tray	1
8	3.6.39.004	Drip Tray Mounting Bolt	2
9	3.3.05.03.005	Leg	4
10	3.3.01.01.023	Spinner	1
11	3.6.11.041	Panel Screw	12
12	3.4.07.01.041	Bolt Hole Cover	12
13	2.3.4.30.037	Panel - Right	1
14	2.3.4.23.009	Panel - Rear	1
15	2.1.3.39.0006	Air Tube	1


2. Internal Parts

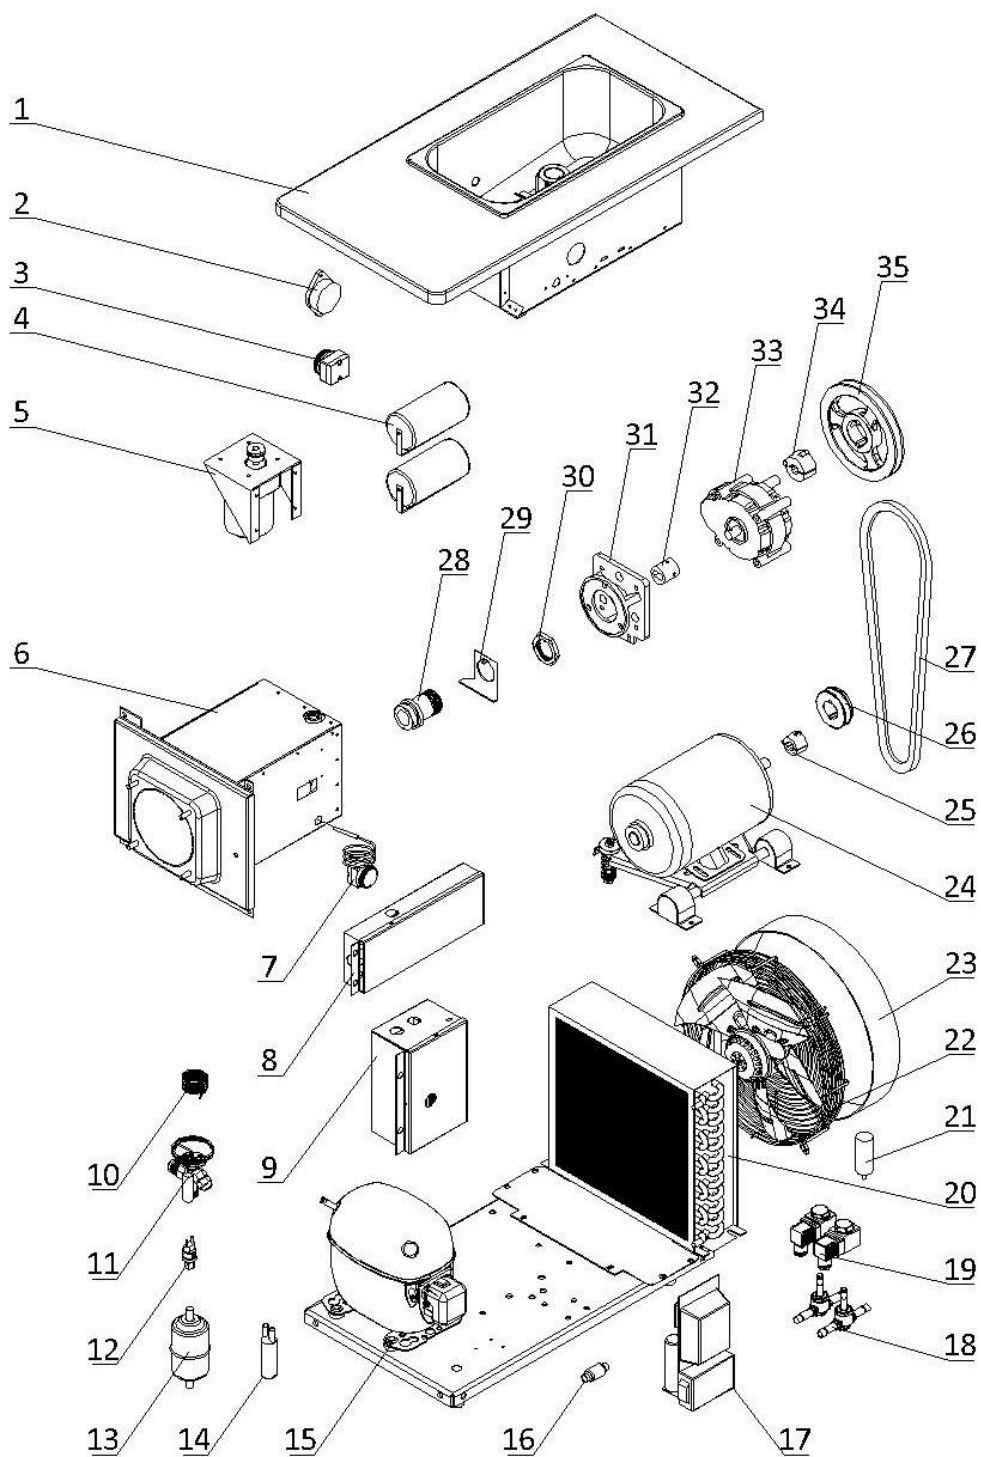

2. Internal Parts


Item	Part Number	Description	Qty.
1	2.1.1.03.0026	Hopper Assembly	1
2	3.1.02.15.003	Alarm - Low Mix	1
3	3.1.01.07.003	Thermostat - 0-40°C	1
4	3.3.01.03.003-1	Capacitor - Motor	1
5	Page 7	Agitator Motor	1
6	2.1.1.06.0021	Cylinder Assembly	1
7	3.1.01.07.002	Thermostat - ±30°C	1
8	Page 8	Electrical Box	1
9	Page 9	Control Box	1
10	3.2.05.01.008	Capillary Tube	1
11	3.2.04.01.011	Thermal Expansion Valve	1
12	3.2.04.06.004	High Pressure Switch	1
13	3.2.04.05.002	Filter Drier - Cylinder	1
14	3.2.04.07.002	Suction Accumulator	1
15	3.2.01.02.025	Primary Compressor	1
16	3.2.04.05.012	Copper Strainer Filter	1
17	3.2.01.04.015	Start Component - Compressor	1
18	3.2.04.04.002	Solenoid Valve Body	1
19	3.2.04.04.015	Solenoid Coil	1
20	3.2.02.01.003	Main Condenser	1
21	3.2.03.04.005-2	Capacitor - Fan Motor	1
22	3.2.03.04.005	Fan Motor	1
23	2.1.3.50.0001	Fan Shroud	1
24	3.3.01.03.003	Motor - Beater	1
25	3.3.04.01.005	Bushing - 1008-16	1
26	3.3.04.02.012	Pulley - Beater Motor	1
27	3.3.03.03.017	Belt - Motor to Beater	1
28	3.3.02.02.002	Rear Shell Bearing	1
29	2.3.6.04.004	Lock Plate - Rear Shell Bearing	1
30	3.3.02.02.010	Nut - Rear Shell Bearing	1
31	2.1.3.15.0004	Bracket - Gear Box	1
32	3.3.02.04.009	Coupling Drive	1
33	3.3.02.01.025	Gear Box	1
34	3.3.04.01.008	Bushing - 1610-16	1
35	3.3.04.02.020	Pulley - Gear Box	1

3. Dispensing Door and Beater

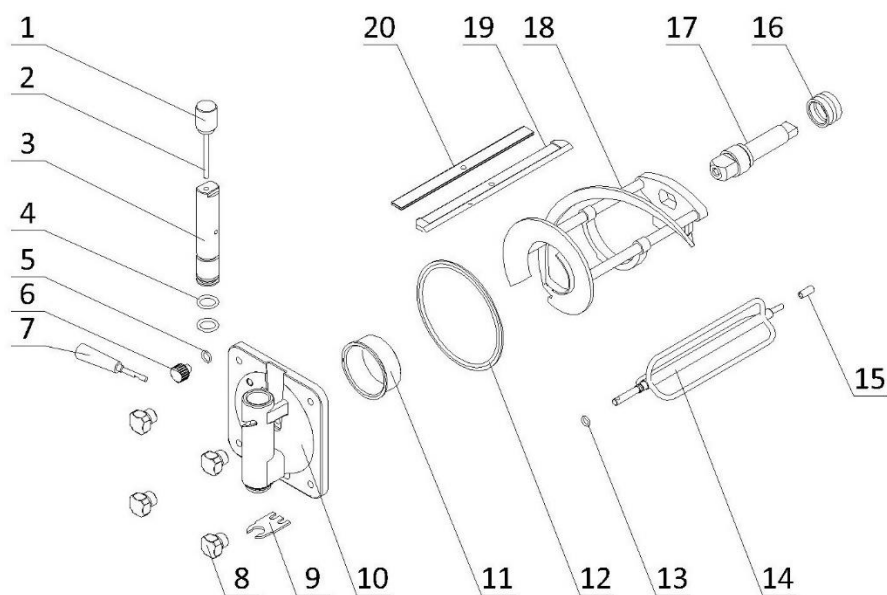


Item	Part Number	Description	Qty.
1	2.1.3.36.0004	Weight - Draw Valve	1
2	2.1.3.36.0003	Pin - Draw Valve	1
3	2.1.3.01.0006	Draw Valve	1
4	3.4.08.01.036	O-Ring - 19x3.55	2
5	3.4.08.01.008	O-Ring - 11.5x2.5	1
6	3.4.07.08.001	Prime Plug	1
7	3.4.05.01.002	Handle - Dispensing	1
8	2.1.3.32.0004	Hand Screw - Dispensing	4
9	2.1.4.04.014	Ice Buster - Dispensing	1
10	2.1.3.14.0006	Dispensing Door	1
11	3.4.01.03.003	Beater Guide	1
12	3.4.08.02.005	Door Gasket	1
13	3.4.08.01.017	O-Ring - 11x2.4	1
14	2.1.1.31.0002	Torque Rotor	1
15	3.4.01.03.004	Torque Guide	1
16	3.4.07.05.002	Gasket - Drive Shaft	1
17	2.1.3.25.0003	Drive Shaft	1
18	2.1.1.10.0003	Beater	1
19	3.4.02.01.003	Plastic - Scraper Blade	1
20	2.3.4.04.003	Clip - Scraper Blade	1

4. Draw Switch and Front Control Panel

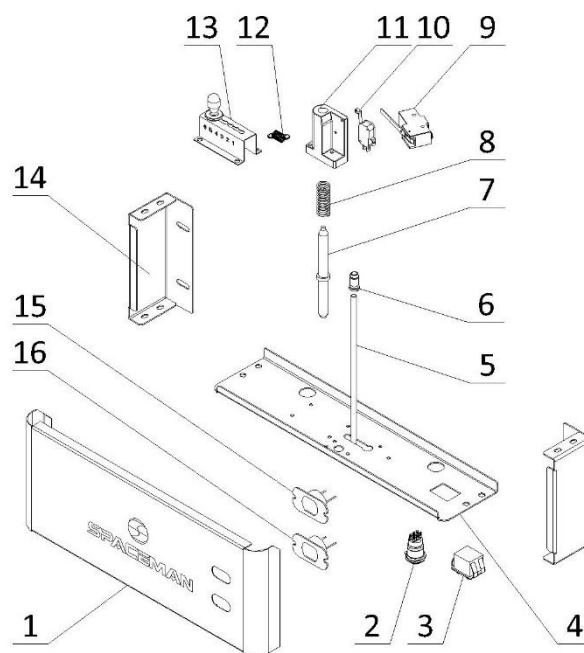


Item	Part Number	Description	Qty.
1	2.3.4.36.031	Panel - Overhead Front	1
2	3.1.03.04.039	Switch - Standby	1
3	3.1.03.03.002	Power Switch	1
4	2.3.4.39.068	Panel - Overhead Bottom	1
5	2.1.4.04.025	Torque Arm	1
6	2.1.4.04.024	Bracket - Spring	1
7	2.1.3.50.0088	Shaft - Draw Switch	1
8	3.6.03.012	Spring - Shaft - Draw Switch	1
9	3.1.03.02.002	Micro Switch - Torque Lever	1
10	3.1.03.01.002	Micro Switch - KW-7-2	1
11	3.4.07.06.008	Bracket - Draw Switch	1
12	3.6.02.005	Spring - Viscosity	1
13	920.1.03.0004	Control Levers - Viscosity Adjustment	1
14	2.3.4.37.047	Panel - Overhead Side	1
15	3.1.02.14.013	LED Light - Red	1
16	3.1.02.14.011	LED Light - Blue	1

5. Hopper Agitator

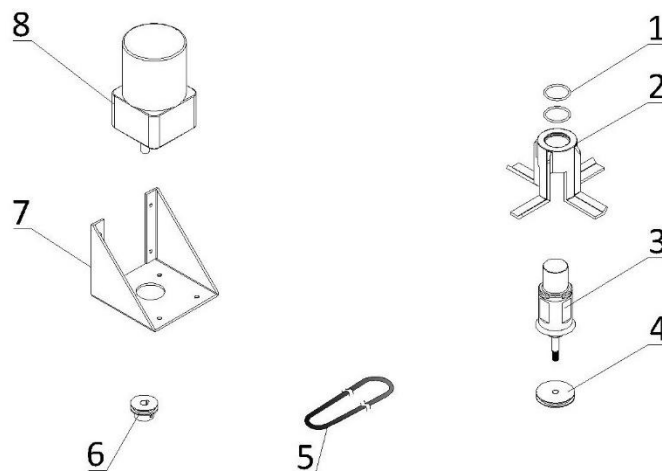


Item	Part Number	Description	Qty.
1	3.4.08.01.034	O-Ring - 31×2	2
2	2.1.1.23.0002	Blade - Hopper Agitator	1
3	2.1.1.12.0002	Agitator Assembly	1
4	2.1.4.02.017	Pulley - Hopper Agitator - Driven	1
5	2.1.4.08.006	Belt - Hopper Agitator	1
6	3.3.04.04.008	Pulley - Hopper Agitator - Drive	1
7	2.3.4.45.003	Bracket - Agitator Motor	1
8	3.3.01.01.044	Motor - Agitator	1

6. Electrical Box

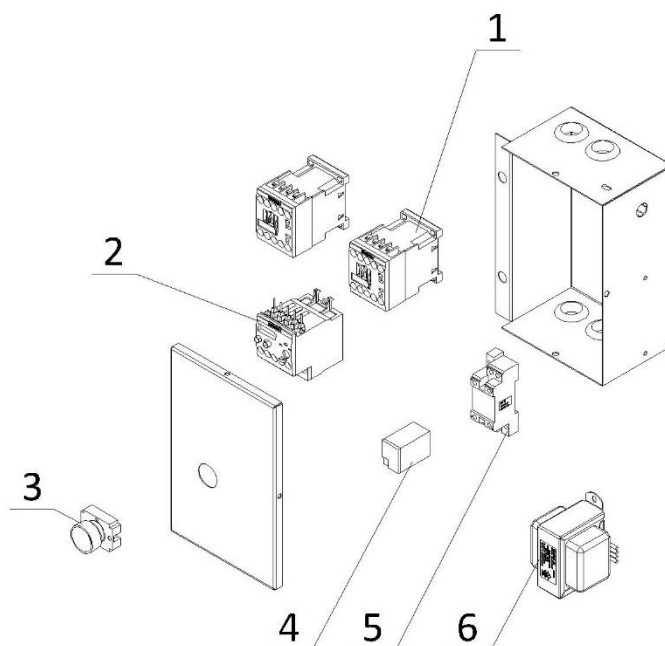

Ite	Part Number	Description	Qty.
1	3.1.01.01.010	Contactor	2
2	3.1.01.02.014	Thermal Overload Relay	1
3	3.1.03.04.002	Reset Button	1
4	3.1.01.03.031	Base - Relay	1
5	3.1.01.03.029	Intermediate Relay - AC220V	1
6	3.1.01.04.002	Transformer	1

7. Control Box

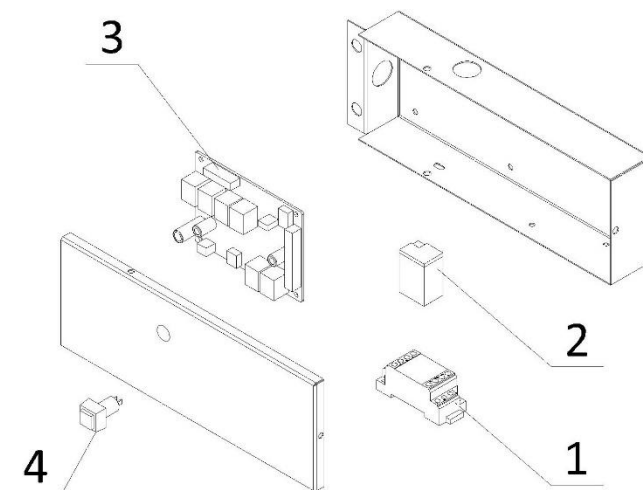

Ite	Part Number	Description	Qty.
1	2.1.1.30.0012	Control Board	1
2	3.1.01.03.031	Base - Relay	1
3	3.1.01.03.027	Intermediate Relay - DC12V	1
4	3.1.03.04.003	Switch - Low Mix Alarm	1